 


DIAL SETTING INTELLIGENT METRONOME

INSTRUCTION MANUAL

DISPLAY AND BUTTON

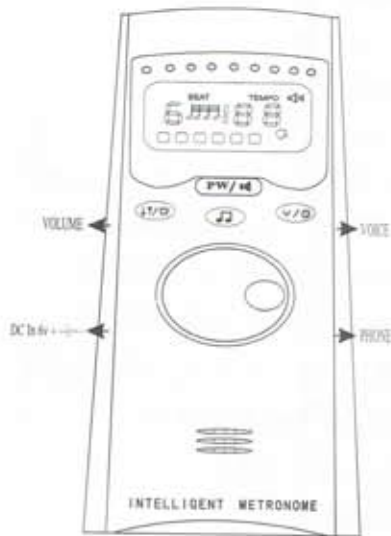

Before using this metronome, Open the rear cover, and insert UM-3 Batteries(attached)

 
CAUTION

1. Dust, direct sunlight, extreme temperature and humidity can damage this unit.
2. Do not drop or hit the metronome against hard surfaces.
3. The LCD screen becomes dim when the battery needs replacing, take out the old battery and insert a new one as soon as possible.
4. If the metronome is left unused for a long time, remove the battery from the metronome, otherwise, battery leakage may cause a malfunction.
5. After 15 minutes of non-using, the metronome will automatically shut off to save battery power.

HOW TO USE


*POWER ON/OFF

With each time the "PW/1/4" button pressed for 1 second, the mode changes over in the following order:

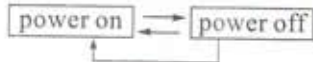

*START/STOP:

 When power on, with each press of the "PW/1/4" button the mode changes over in the following order:

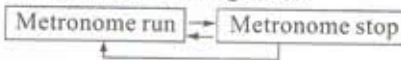

*SET TEMPO:

Turning dial clockwise to increase the tempo while turning dial counter clockwise decrease the tempo.

*SET BEAT:

With each press of "1/4" button, the number changes over in the following order → 0 → 1 → 2 → 3 → 4 → 5 → 6 (under reference note mode, press "1/4" button can enter metronome mode)

*SET AVLUE:

With each press of "1/2" button, the value changes over in the following order → 1 → 2 → 3 → 4 → 5 → 6

*SET NOTE:

 
With each press of "V/G" button, the number of note changes over in the following order: C → C → D → D → E → F → F → G → G → A → A → B

*SET VOLUME:

With each press of VOLUME button, the volume changes over in the following order: No sound →)) →))) →))))

*SET VOICE:

Under metronome mode, With each press of VOICE button, the mode changes in the following order:

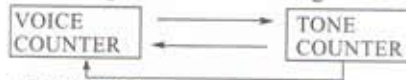

*SET TIME:

Press "1/4" button for 1 second and the hour digits start flashing, using dial to set the hour, press "1/4"

button again and the minutes start flashing, using dial to set the minutes, press "1/4" button again and the time setting is over.

*SET ALARM:

Press "V/G" button for 1 second and the hour digits start flashing, using dial to set the hour, press "V/G" button again and the minutes start flashing, using dial to set the minutes, press "V/G" button again and the time setting is over. (during alarm setting, press "PW/1/4" button, the alarm mark disappear, alarm is disable).

*EARPHONE JACK:

Insert the plug of the earphone into the earphone Jack, the sound will be heard through the earphone. this time no sound will be heard from the speaker.

*POWER SUPPLY JACK:

using 6v + -) - - AC adaptor specifications.

*MODES: metronome mode and reference note mode.

*TEMPO: =40-208BPM

*BEAT: 1, 1/2, 1/4, 3/4, 2/4

*ACCURACY: metronome $\pm 0.2\%$
reference note ± 1.0 cent

*TONE: total of three tones for the strong beat, weak beat and rhythm

*LED DISPLAY: alternately lighting of 9 LED with red light for strong beat and green light for weak beat.

*VOLUME: 5 step adjust

*POWER SOURCE: three um-3 batteries or 6v ac adaptor

*DIMENSIONS: 156mm \times 58mm \times 48mm